



WOODSHAW

CRAFTED FOR YOUR OUTDOOR SPACE

Assembly Instructions



(W x D x H) 1.27 m x 0.55 m x 2.07 m

TANSLEY SEATED ARBOUR

630007

Please keep these instructions for future reference and use

Helpline: **01302 761573** – Monday to Friday 9am – 5pm

TANSLEY ASSEMBLY INSTRUCTIONS

TANSLEY PACK LIST

ITEM	DESCRIPTION	QUANTITY
A	SIDE ASSEMBLY	2
B	SEAT ASSEMBLY	1
C	SEAT BACK ASSEMBLY	1
D	REAR TRELIS PANEL	1
E	ROOF PANELS	2
F	FASCIA BOARDS	4
G	FASCIA CAPS	2
H	SEAT FRONT SLAT	1
I	RIDGE CAPPING	1
J	BACK PANEL	2
K	FLOOR PANEL	1
L	FRONT PANEL	1


FIXINGS

FIXING	DESCRIPTION	QUANTITY
fixing 1	40 mm Screws	16
fixing 2	60 mm Screws	32
fixing 3	30 mm Screws	4


Assembly requires 2 persons.
Tools required: Cordless Drill / Screwdriver

Helpline: **01302 761573** – Monday to Friday 9am - 5pm




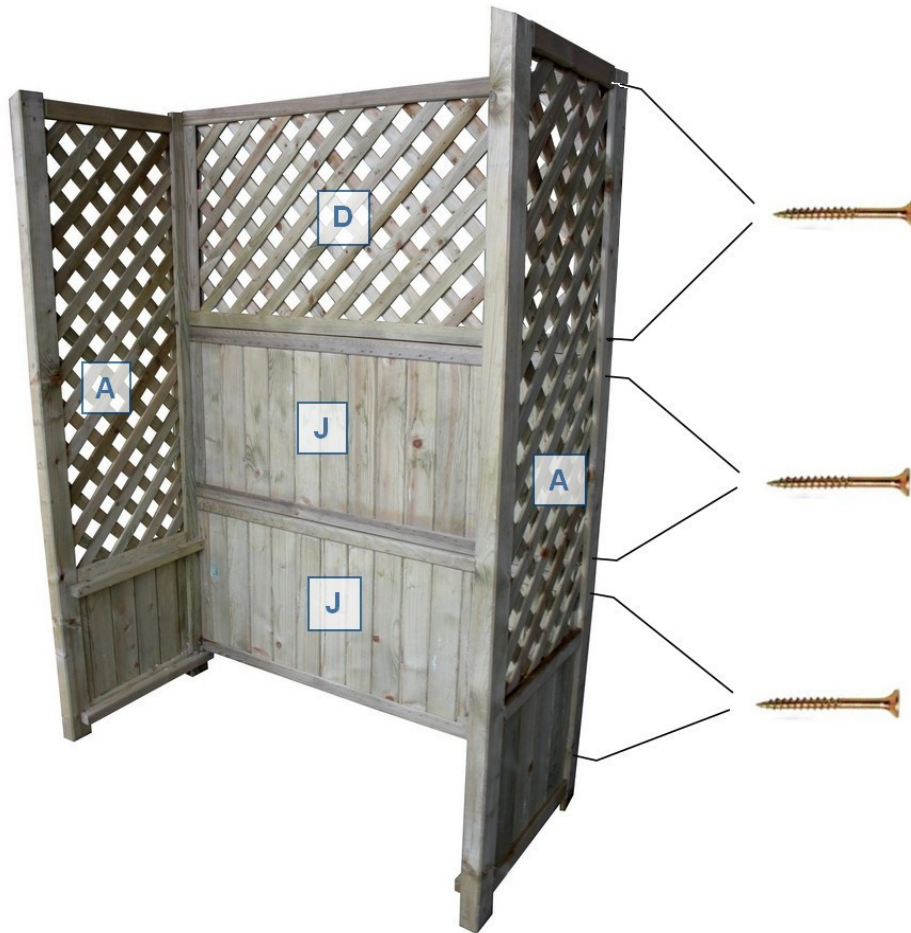


1. Fix rear trellis panel `D`, `J`, `J` to Side Assembly `A` using 12 x fixings `2`.

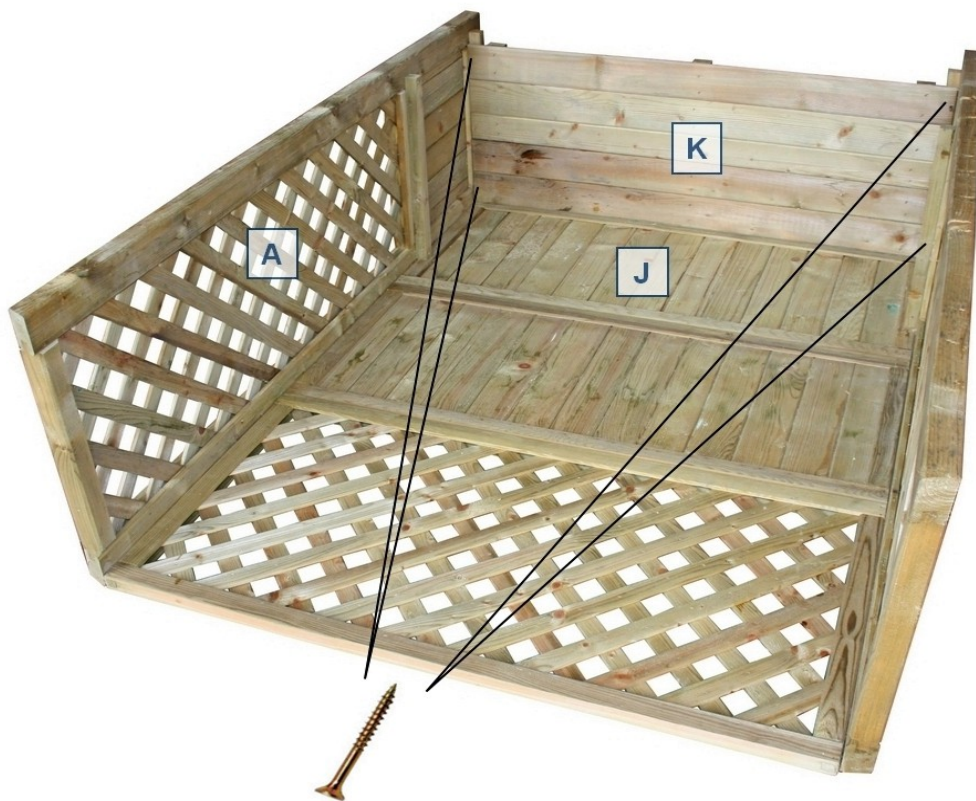


2. Fix floor Panel `K` to side panels `A` using 4 x fixings `1`.

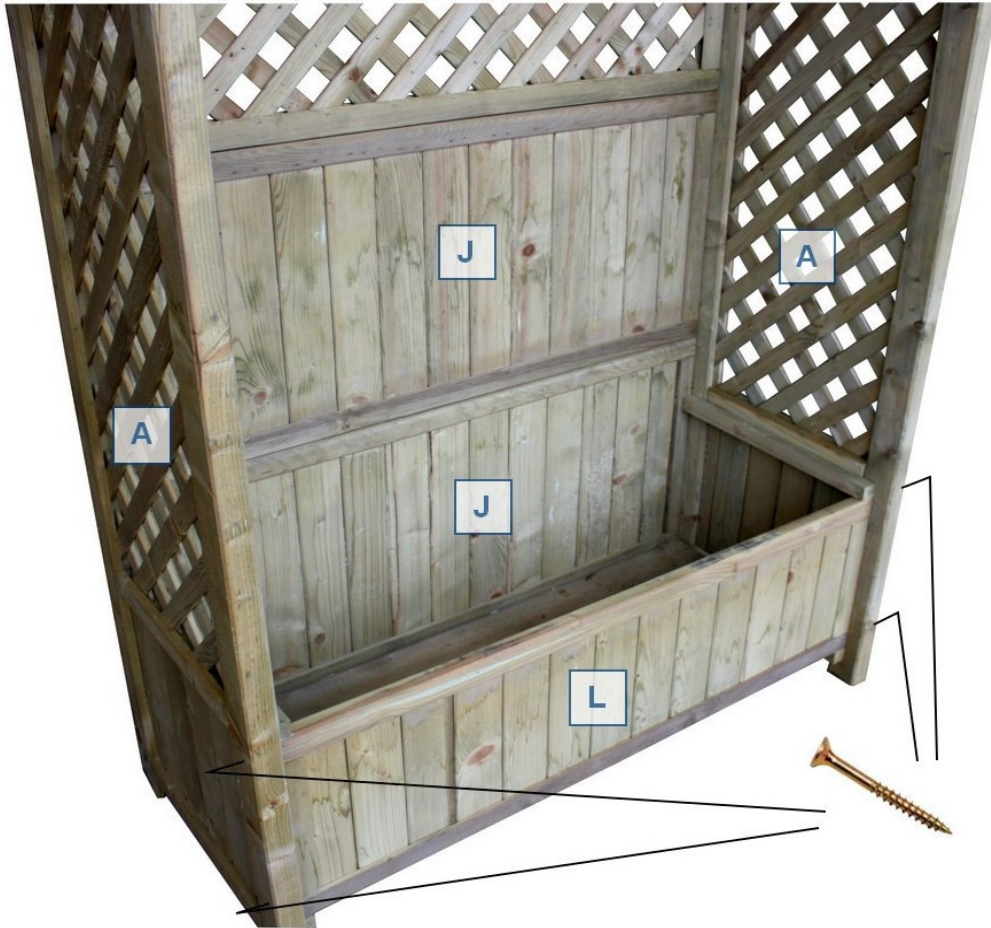


3. Fit front panel `L` to side panels `A` using 4 x fixings `2`.

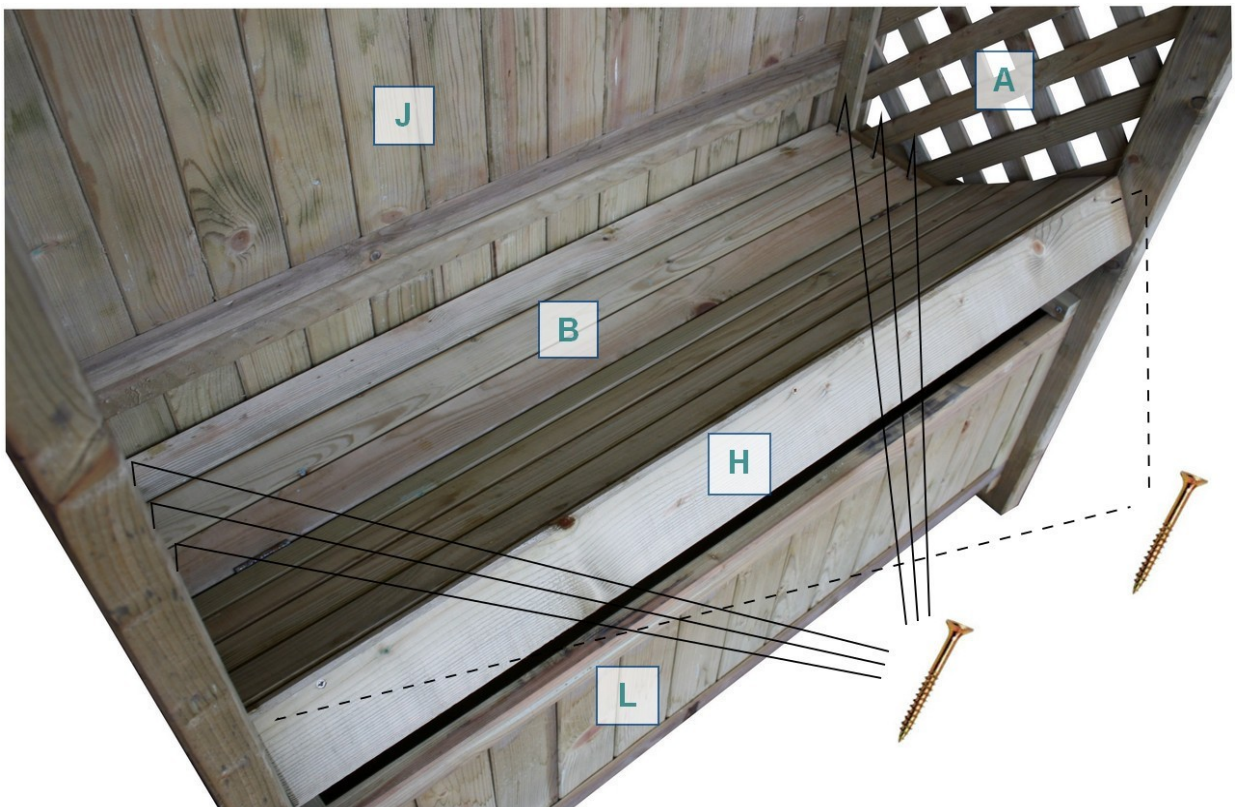


4. Fit hinged seat `B` to side panels `A` using 6 x fixings `2` and fix seat front slat `H` using 2 x fixings `2`.

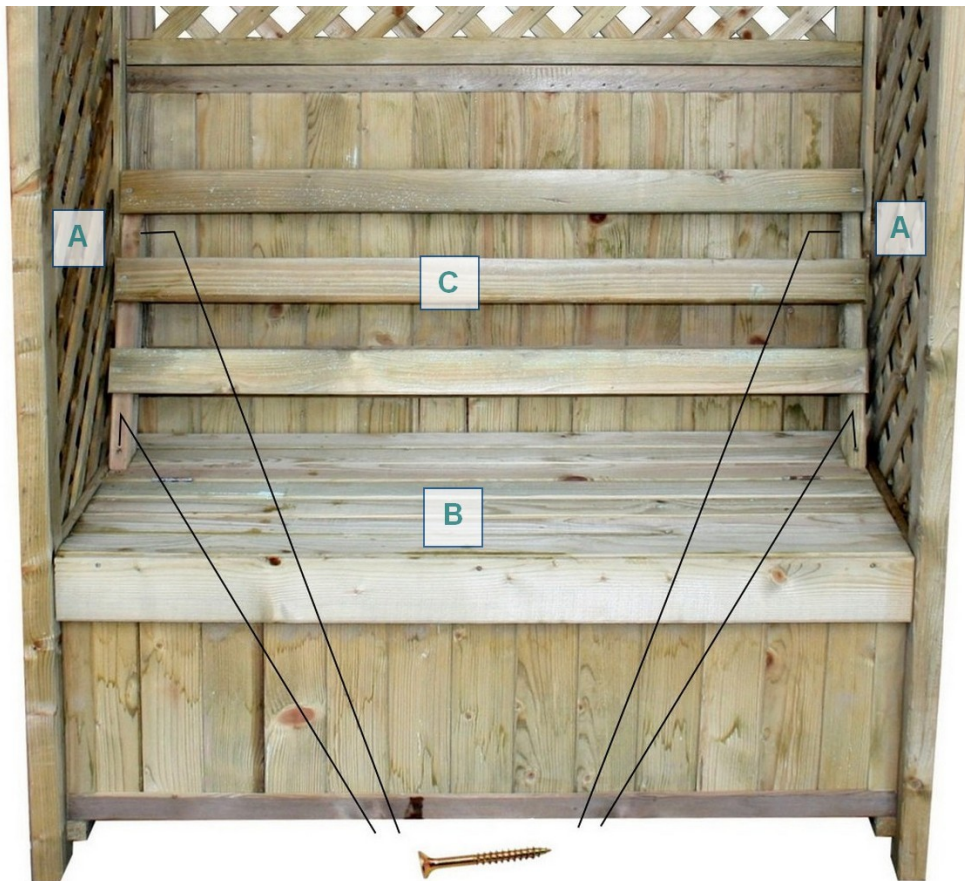

5. Attach Seat Back Assembly `C` to Side Assembly's `A` and `B` using 4 x fixings `2` .

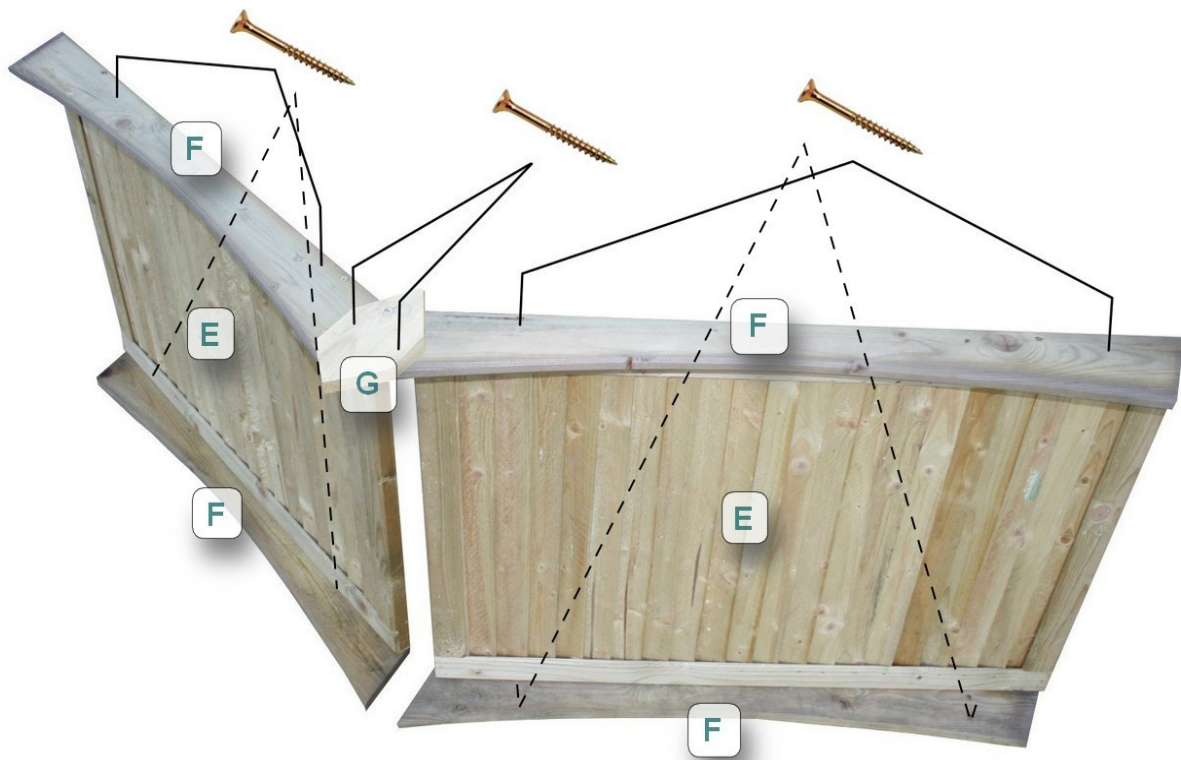

6. Fit fascia boards `F` to roof panels `E` using 8 x fixings `1`. Join roof panels `E` together with fascia cap `G` using 4 x fixings `3`.

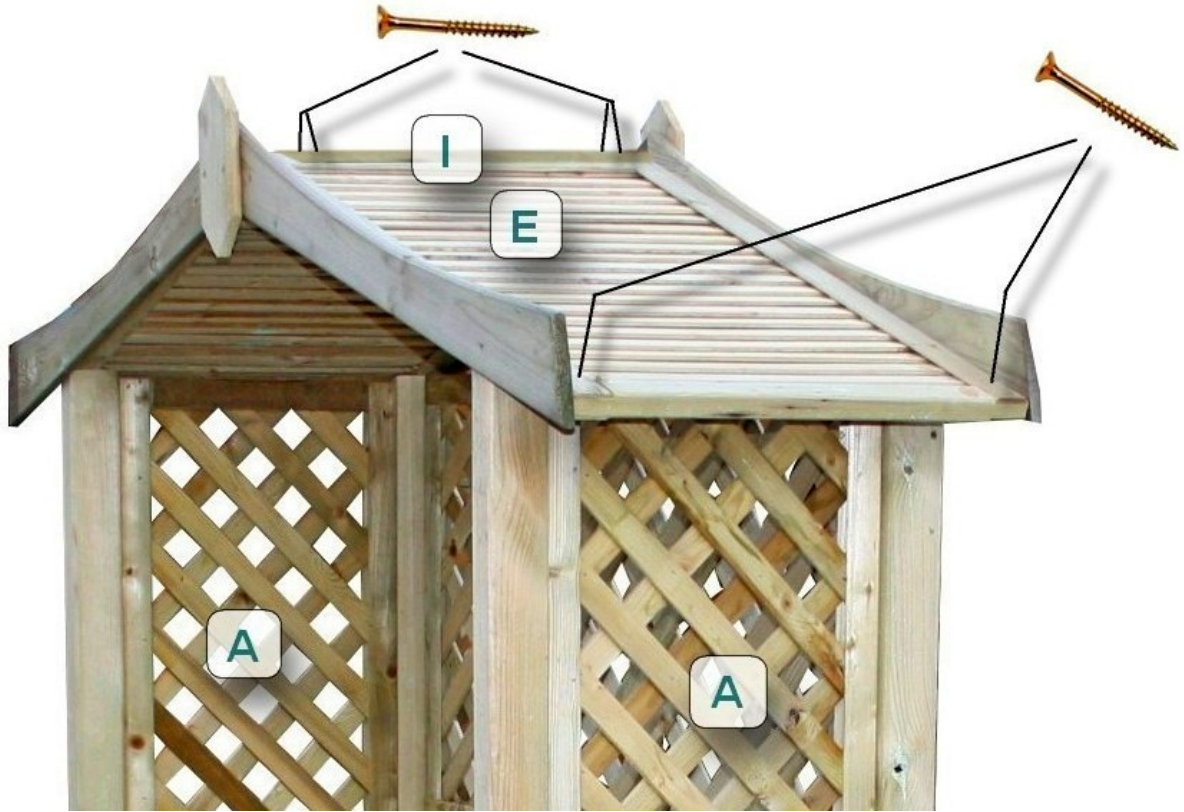

7. With 2 people place the roof unit on to side panels `A` and fix using 4 x fixings `2`. Fit ridge capping `I` to roof assembly's `E` using 4 x fixings `1`



Care and Maintenance

Your new garden furniture is a natural timber product. In order that you may prolong the life of this product, we recommend that you follow the general care and maintenance advice below.

The timber used in the Anchor Fast furniture is pressure treated to provide protection against biodeterioration in end use situations. It is possible that under some environmental conditions that a surface mould may develop, should this happen clean off with mild soapy water.

All fixings to be checked for tightness and signs of deterioration at the beginning of each season and on a regular basis.

We recommend that this product is positioned on firm level ground. If necessary the product can be firmly fixed to the ground by using a proprietary ground anchor.

Product should be checked regularly, and re-coated with a suitable topcoat finish when required. If accidental damage occurs, lightly sand and re-coat with a suitable water based wood preservative. Product can be cleaned periodically with a mild soapy detergent.

This is a natural product and therefore colour may vary slightly from piece to piece.

As a natural product it is possible that knots can work loose and sometimes fall out, also resin leakage and small cracks can appear on the woods surface. Should this happen, clean of resin, ensure any sharp edges are sanded smooth and recoat.

Products should be given suitable protection from adverse weather conditions, particularly during the winter months.